

---

# Stainless Steel Chimney Extractor

HJA2450




User & Installation Guide

---

**LAMONA**  
Exclusive to Howdens Joinery Co.

# OPERATING YOUR EXTRACTOR

## EXTRACTOR CONTROLS

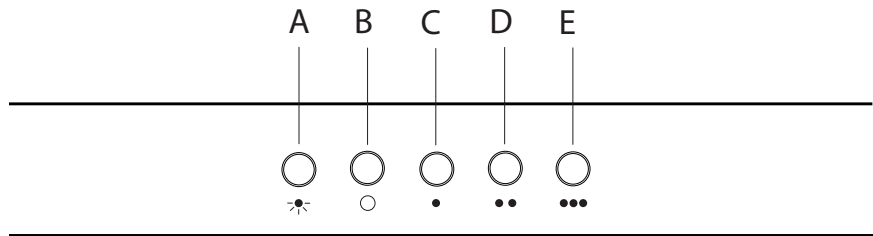

- |    |                        |    |                        |
|----|------------------------|----|------------------------|
| A) | Light switch.          | C) | Selects motor speed 1. |
| B) | Motor Off switch.      | E) | Selects motor speed 3. |
| D) | Selects motor speed 2. |    |                        |

**WARNING: Never have a naked flame in direct contact with the grease filters or within the extractor hood.**

## THE GREASE FILTERS

The grease filter is of a metallic material and should be washed using a neutral detergent or in a dishwasher.

### Removal of grease filters:

- 1 Press latch towards side of extractor
- 2 Lower filter to remove.

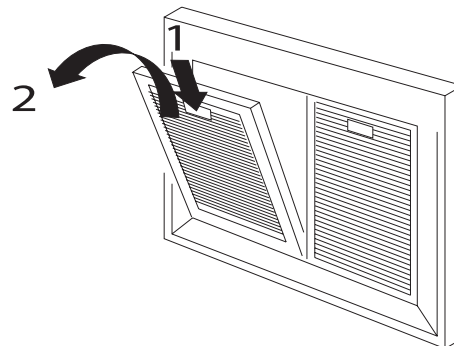


Fig 10.

## THE CARBON FILTERS

Carbon filters have a limited life. We advise you to change them when there is a noticeable drop in performance. The intervals between changing the filter will depend entirely upon the amount of cooking you do, but on average they will last about 6 months.

To gain access to the carbon filters first of all, remove the grease filters as above. Remove the old filters and reposition new charcoal filters (HJA2900 - pack of 2).

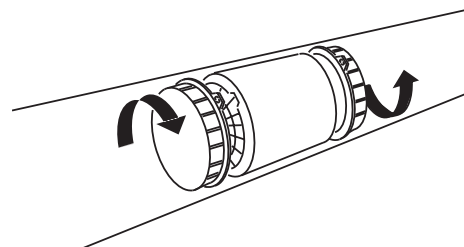


Fig 11.

# MAINTENANCE

**IMPORTANT: Before cleaning or attempting any type of maintenance, always make sure that the electric supply is disconnected.**

To avoid the possibility of fire, adhere strictly to all of the recommendations included in this booklet, paying particular attention to the grease filters to ensure grease deposits do not build up.

**NOTE: The manufacturer declines all liability in cases where the instructions for the appropriate installation, maintenance and use of the extractor hood are not observed.**

If the power supply is cut or damaged in any way, disconnect the extractor from the electricity supply and call the service number on the rear cover of this booklet.

## GENERAL CLEANING

Wipe the external surfaces of the appliance regularly using warm water and a mild detergent. NEVER use abrasive cleaners.

## REPLACING THE LIGHT BULBS

- Ensure that the power is switched off and the bulbs are cool.
- Remove the grease filters to gain access to the bulbs.
- Unscrew to remove the lamp and replace it with a new lamp of the same type and wattage.

**NOTE: LAMP REPLACEMENT IS NOT COVERED BY YOUR GUARANTEE**

# TROUBLE SHOOTING

**Before you assume the worst, check this simple fault-finding guide to get to the root of the problem:**

## **Lamps fail to operate?**

- A replacement is probably necessary, but first check that the lamp is correctly fitted into its holder. Remember that the light bulbs are not covered by our guarantee. Remember to disconnect the mains electricity supply before replacing the lamps. Do not touch the lamps with fingers - use a suitable cloth.

## **Motor is on but fan does not seem to be as efficient as usual?**

- Check the grease filter. If it has not been cleaned recently, it might be clogged with grease. If this filter is relatively clean, check carbon filters (if fitted). If they have not been replaced for more than six months, remove and insert new ones. As time goes by, accumulated grease tends to stifle the carbon filters in just the same way as the grease filter, thereby reducing the efficiency of both the fan and the filter itself.

## **Works normally but cooking smells linger?**

- If you're using the unit in recirculating mode, change the charcoal filter. It may require replacement.

## **Appliance does not work at all?**

- Check your extractor is switched on at the mains. Next, check there is power to your home by switching on adjacent lights etc.

## **Still not working? Call the service**

- If, having consulted the above diagnostics and you are still unable to remedy the situation, please call the service number on the rear cover of this manual.